


**Congratulations on your choice of EDISION argus piccolo 3in1 plus CI receiver.**

Please note that all the information included in this leaflet are valid at the date of printing the document.

Currently updated information and comprehensive manual are available at: [www.edision.gr](http://www.edision.gr)


### 1 Open package

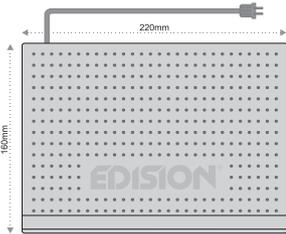

IR remote control with 2x AAA batteries



Information

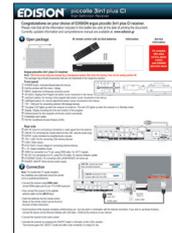

Service information

For complete after sales service, please contact your EDISION specialist dealer.


### Argus piccolo 3in1 plus CI receiver

**Note:** The front cover may be covered by a transparent plastic film from the factory, that can be easily peeled off.

The package may include accessories that are not mentioned in the respective section.


#### Front panel

- ① POWER button: Activates/Deactivates the device.
- ② Exit the window with the menu / dialog.
- ③ MENU: Show or hide the main menu.
- ④ OK button: displays the Program list and/or cursor movement in the menus.
- ⑤ Up/Down buttons: for moving in the program lists and/or cursor movement in the menus.
- ⑥ Left/Right buttons: for volume adjustment and/or cursor movement in the menus.
- ⑦ USB port: for connecting external USB storage devices.
- ⑧ The green LED lights up when the receiver is turned on. The red LED lights up when the receiver is in Standby mode.
- ⑨ Display: Display including the time and location of the program.
- ⑩ Infrared sensor for the reception of remote control commands.
- ⑪ Embedded card reader.
- ⑫ Port for Conditional Access Module (CAM).

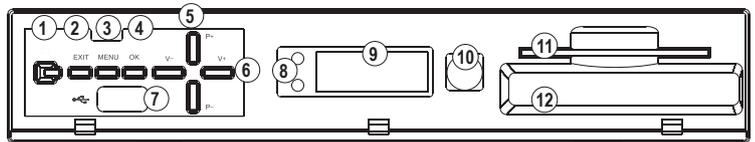

#### Rear side


- ⑬ ANT IN: Input for connecting to terrestrial or cable signal from the antenna.
- ⑭ LNB IN: For connecting the coaxial cable from the LNB, using the proper plug.
- ⑮ S/PDIF: Audio interface for amplifier/audio console.
- ⑯ USB: Port for connecting USB memory devices
- ⑰ CVBS: Video output.
- ⑱ 0/12V 50mA: Circuit voltage for connecting external devices..
- ⑲ L / R: Output amplifiers Audio.
- ⑳ HDMI: For connection to a TV set, using HDMI cable. For HD TV signals.
- ㉑ RS 232: For connecting to a PC, using RS-232 cable, for receiver software update.
- ㉒ ETHERNET (RJ45): For connection with LAN/INTERNET, for home use.
- ㉓ POWER: ON/OFF of the receiver power supply.

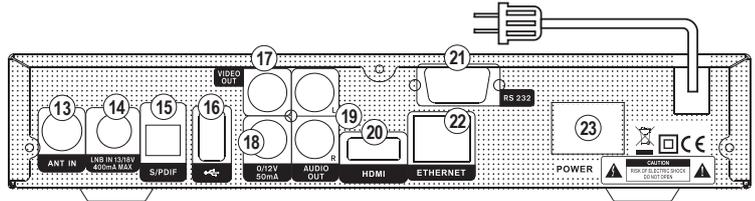

### 2 Connection

**Note:** For trouble-free TV signal reception, the installation and calibration should be carried out by a qualified professional.

- Connect the receiver using **HDMI cable** via the HDMI output port to your TV's HDMI input port
- Now connect the receiver to the satellite antenna cable via the **LNB IN** input
- Insert the batteries into the remote control. Notes on the remote control can be found on the back of these instructions
- Some functions of the receiver increases comfort during use - but only work in combination with the Internet connection. If you wish to use these functions, connect the device via the Ethernet interface with LAN cable - (RJ45) at the entrance of your internet.
- Connect the receiver to the mains socket.
- Activate the receiver by pressing the ON/OFF switch in the back, to the «ON» position. The receiver goes into «BOOT» mode and after a few moments it is ready for use.

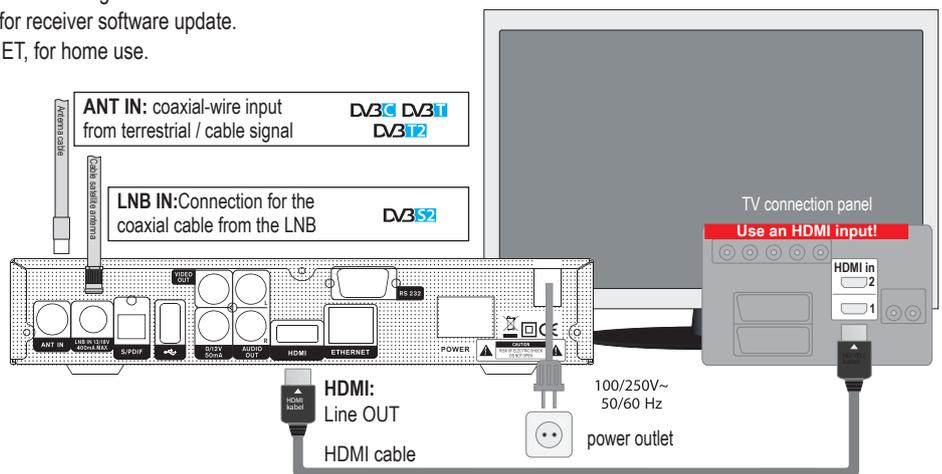

### 3 Remote control

**Notes:** Many of the listed buttons have multiple functions, which, are displayed in the menus. Some buttons and functions are optional. Important functions and buttons are briefly explained below. The buttons to be used are marked in red in the diagrams.

You are watching a channel, but now want to switch to another channel  
» **How to switch between channels ...**

**Option 1**  
Use the up-down arrow buttons while watching television to select another channel.

**Option 2**  
Enter, via the number buttons, the number of the channel that you want displayed. Enter the number 0 via the ZOOM button.

**Option 3**  
Call up the channel list via the OK button. Use the arrow buttons to navigate to the channel you want to select. Press the OK button to select the channel.

You are watching a TV program or listening to a radio program and now want to change the volume » **How to change the volume on the receiver ...**

**Option 1**  
In TV or Radio mode, press the right arrow key to increase the volume. Press the left arrow key to decrease the volume.

**Option 2**  
In TV or the radio mode, press the symbol «plus» key VOL to increase the volume. Reduce the volume by pressing the icon «minus» key VOL.

**Option 3**  
Press the MUTE button in TV or Radio mode to switch off the sound completely. Repeated pressing of the MUTE button switches the sound back on.

» **How to use the main menu ...**


The channel list displays all the installed channels  
» **How to use the channel list ...**

Press the MENU button to call up the main menu. Use the arrow buttons to navigate between the menu items and the OK button for selecting. Press the EXIT button to exit the menu structure.

Press the OK button in TV or Radio mode to call up the channel list. Use the arrow buttons and OK button to navigate the menu. The EXIT button closes the list.

Use the Page button in the right column of the menu to scroll page by page through the channel lists. The INFO button displays information about a channel. The FIND button searches for channels.

Depending on which column of the menu of the channel list you are, you can call up other functions and menus with the coloured buttons. These possible functions are displayed in the lower section.

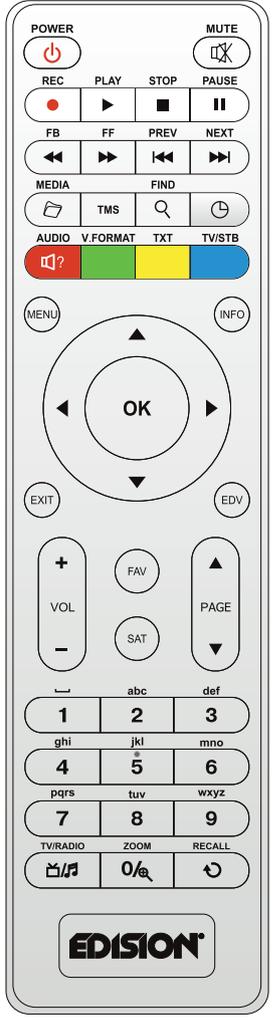

- On/Off button.
- Mute On/Off.
- Starts recording manually.
- Start playing the TimeShift function and / or a Recording.
- Back to normal recording speed.
- Finishes TimeShift, a recording or a playback.
- Pauses playback.
- Scrolls listings per page backward. Fast Possibility backwards.
- Scrolls listings per page forward. Fast-forward capability.
- Returns to the start, alternatively to the previous recording..
- Switches to the end, alternatively to the next recording.
- Displays a file list.
- Show bar TimeShift.
- Displays a file-list.
- Allows you to set the time at which the Receiver autom. switches to standby mode.
- Calls up the Audio menu.
- Changes the display TV standard.
- Calls up the Subtitle/Teletext menu.
- Switching between TV and Receiver
- Displays the main menu.
- Displays the information bar.
- With the arrow keys you can scroll in the lists up and down, left and right or regulate the volume. With the OK-key you confirm your menu-entry or activate the channel-list.
- Exits a Menu/Dialogue window
- Selection of the electronic program guide EDIVISION.
- Scrolls up (+) or down (-) change the volume.
- Scrolls up (+) or down (-) in lists of channel lists.
- Displays the favourite lists.
- Displays the satellite lists (optional).
- Selection of TV/Radio program. Input of numbers or letters in the menus.
- Toggles between TV and Radio mode.
- Entering the number 0 / enlarges the image..
- Returns to the previous program.

**Insert/replace batteries in(to) the remote control**

When inserting the batteries (2XAAA), observe the correct polarity. When the remote control is not in use for a long period of time, please remove the batteries to avoid possible damage to the remote control. If the batteries are dead, dispose of them properly and in an environmentally friendly manner, and not with household waste.

