

Replacement remote control for Grundig TV sets with same symbology as the original one



Number of devices

1

Controllable devices

TV GRUNDIG

Controls

Controls all functions

Functions

Menu, AV, Teletext, Color

Brands

Compatible with all Grundig models

Type of programming

No need of programming. You only have to insert batteries and it is ready to be used.

Batteries

2x 1,5 V - AAA (not included)

Code stored

Does not lose memory during battery replacement



Packaging 10 x 28 x 3 cms

